

VERCO

 
Apollo

Operating
Instructions



 **my chair**


back rake action

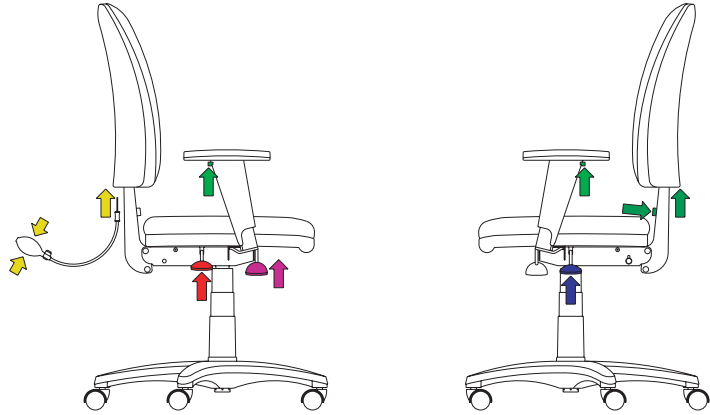

back angle

lift lever to release action, lean backwards or forwards to achieve desired position, release lever to lock.

 forward tilt action

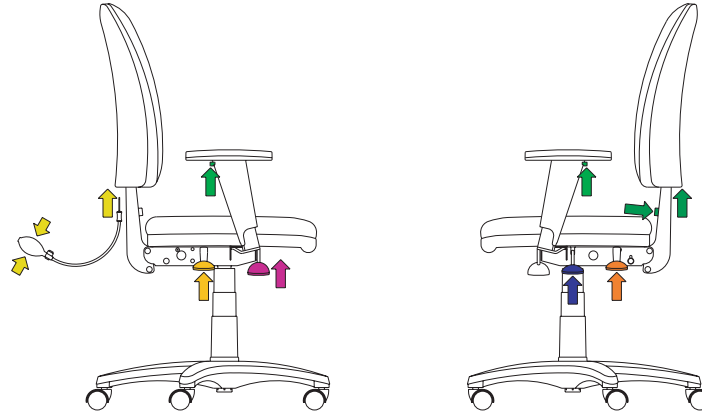

back angle

 
pull lever down to release action, lean backwards or forwards to achieve desired position, lift lever up to lock. for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

the action has a safety feature. when the action is first unlocked, lean against back to start the action.

forward tilt

push lever down to activate the seat tilt. use body weight to adjust, lift lever to lock the seat in the desired position.

synchronised action

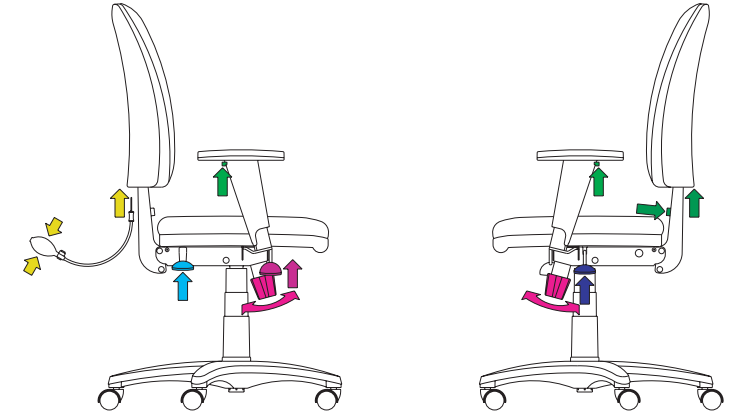

syncro action

push lever down to release action, lean backwards or forwards to achieve desired position, lift lever up to lock. for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

the action has a safety feature. when the action is first unlocked, lean against back to start the action.

tension control

to adjust the tension of the action, turn knob clockwise to increase and anti-clockwise to decrease tension.

arm height

lift button under arm rest and raise or lower arm rest to the desired height. release button to lock.

seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

seat depth

lift lever to release seat, use body weight to slide seat to desired position, release lever to lock.

 
 
back height

push button at the base of the back rest and raise back to desired height. release button to lock.

inflatable lumbar

carefully insert the adaptor into the valve located at the base of the back. pump balloon until desired support is achieved. *carefully remove adaptor once lumbar support is correct, safely store for future use.*

24 hour action

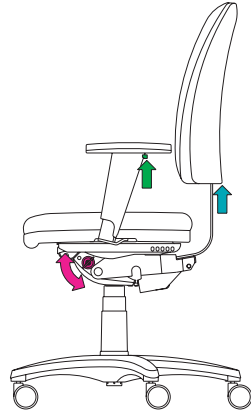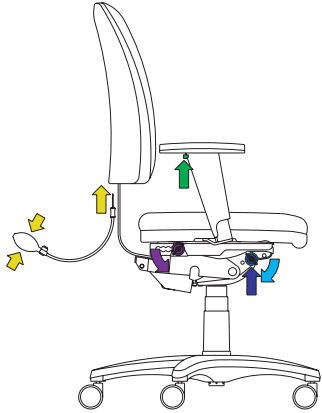

Apollo Back Rake Action

Apollo Forward Tilt Action

Apollo Synchronised Action

Apollo 24 Hour Action

syncro action

turn lever clockwise to release action, lean backwards or forwards to achieve desired position, turn anti-clockwise to lock. for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

the action has a safety feature. when the action is first unlocked, lean against back to start the action.

tension control

to adjust the tension of the action, turn lever clockwise to increase and anti-clockwise to decrease tension.

seat depth

turn lever clockwise, use body weight to slide seat into position, turn lever anti-clockwise to lock.

back height

place hand below the back, gradually lift to desired height. lift to top to allow back to drop to start position.

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.



VERCO
OFFICE FURNITURE LIMITED

www.verco.co.uk