




task/managerial

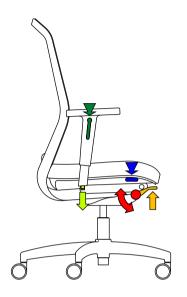

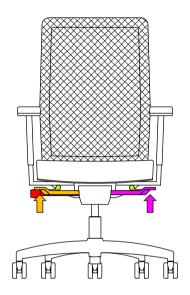

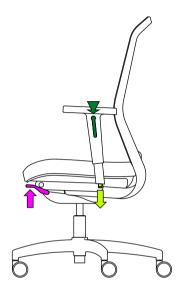

seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

seat depth

push button to release seat, use body weight to slide seat to desired position, release button to lock.

arm width

push lever down to release, slide arm to desired position, pull lever up to lock.

arm height

push button and raise or lower arm rest to the desired height. release button to lock.

syncro action

this lever has three positions:

middle position - push lever to middle position to release action, lean backwards or forwards to achieve desired position. bottom position - push lever to bottom position to allow seat to tilt forward by an additional 3° from horizontal. top position - lift lever up to the top position to lock.

for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

the action has a safety feature; when first unlocked, lean against back to start the action.

tension control

to increase the tension of action turn handle clockwise. turning anti clockwise decreases tension.

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.

