

VERCO


Reality

Operating
Instructions



back height

lift buttons at the base of the back rest and raise to desired height.
release button to lock.

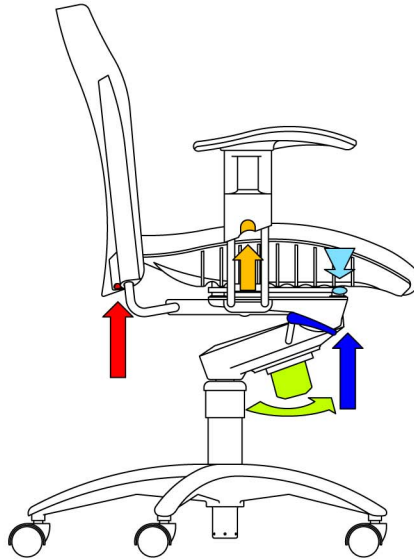

arm height

lift button and raise or lower arm rest to the desired height.
release button to lock.

seat height


lift lever and use body weight to raise or lower the seat to desired position,
release lever to lock.

seat depth

push button to release seat,
use body weight to slide seat to desired position,
release button to lock.

tension control

to decrease the tension of the syncro action, turn knob clockwise and anti-clockwise to increase tension.

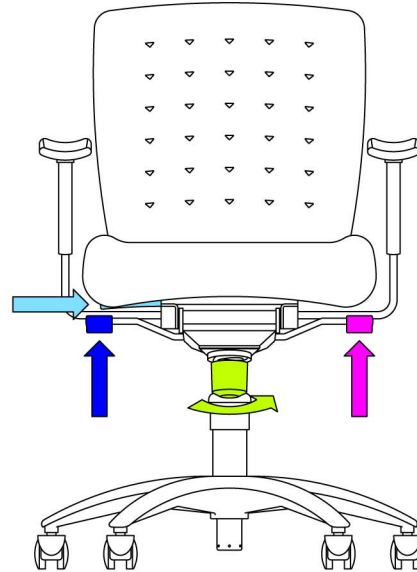

syncro action

lift lever to release action,
lean backwards or forwards to achieve desired position,
push lever down to lock.

for 'dynamic posture' the chair may be left unlocked in it's 'free float' mode.

*the action has a safety feature.
when the action is first unlocked, lean against back to start the action.*

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.



VERCO
OFFICE FURNITURE LIMITED

www.verco.co.uk