




VERCO

Verve²

Operating
Instructions

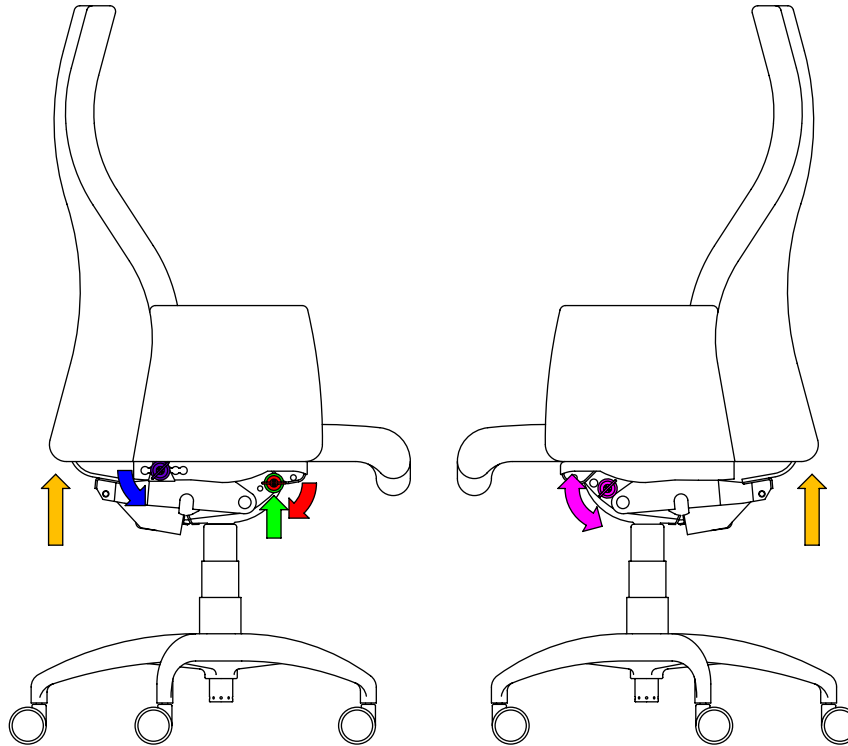

syncro action

turn clockwise to release and anti-clockwise to lock.

for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

the action has a safety feature. when the action is first unlocked, lean against back to start the action.

back height

place hand below the back, gradually lift to desired height. lift to top to allow back to drop to start position.

seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

seat depth

turn lever clockwise to release, use body weight to slide seat into position, turn lever anti-clockwise to lock.

tension control

to adjust the tension of the action, turn lever clockwise to increase and anti-clockwise to decrease.

care advice

Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.

Please visit www.verco.co.uk for further information.



VERCO
OFFICE FURNITURE LIMITED

www.verco.co.uk