



# VERCO

## Vibe

Operating  
Instructions

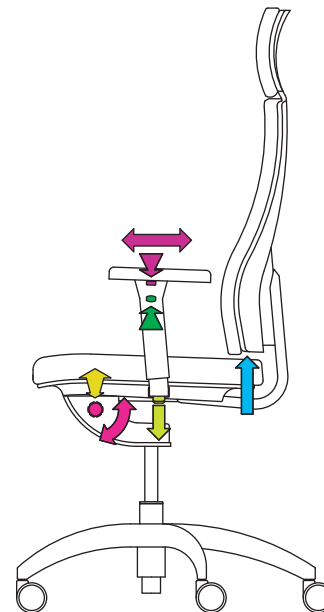

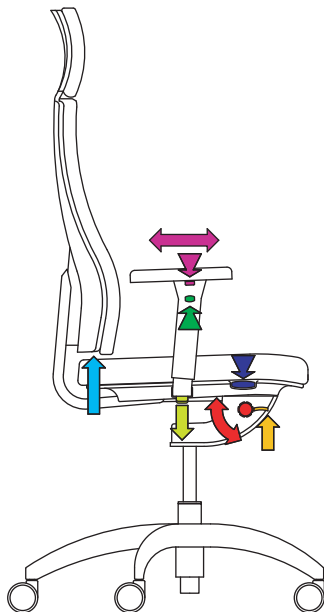

### back height

place hand below the back, gradually lift to desired height. lift to top to allow back to drop to start position.

### arm position

push button and twist arm pad until it clicks into the next locking position.

The arm pad can also slide backward or forwards along it's length.

### arm width

push lever down to release, slide arm to desired position, pull lever up to lock.

### seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

### syncro action

turn handle anti-clockwise to release action, lean backwards or forwards to achieve desired position, turn lever clockwise to lock.

for 'dynamic posture' the chair may be left unlocked in its 'free float' mode.

### arm height

push button and raise or lower arm rest to the desired height. release button to lock.

### tension control

to increase the tension of action, pull handle out and turn clockwise. turning anti-clockwise decreases tension.

### seat depth

push button to release seat, use body weight to slide seat to desired position, release button to lock.

### forward seat tilt

pull out handle to increase the forward stop point of the synchro action by three degrees.

*the action has a safety feature. when the action is first unlocked, lean against back to start the action.*

# care advice


Please regularly check that your chair's components are complete and in good working order and ensure that the chair is structurally sound and functioning properly.

Plastic components should be wiped with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

In order to maintain the fabric over the five year guarantee period, the upholstery must be cleaned and vacuumed on a regular basis.


Please visit [www.verco.co.uk](http://www.verco.co.uk) for further information.

## conference

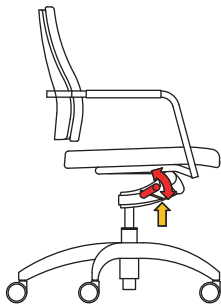

### tension control

to increase the tension of action, pull handle out and turn clockwise. turning anti-clockwise decreases tension.

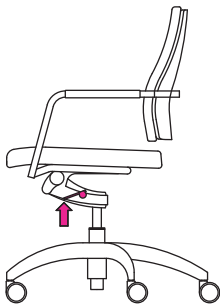

### seat tilt

push lever down to activate the seat tilt. use body weight to adjust, pull lever up to lock the seat in the desired position.

### seat height

lift lever and use body weight to raise or lower the seat to desired position, release lever to lock.

**VERCO**  
OFFICE FURNITURE LIMITED

[www.verco.co.uk](http://www.verco.co.uk)