


Step 1

The Booth assembly consists of two assembled end frames, three linking rails, link curtain and fixing screws.

Stand the assembled end frames in position using a linking rail for distance in the room to check positioning before assembly.

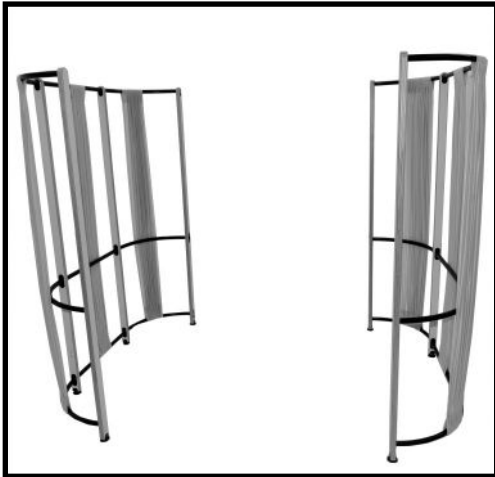


Step 2

Remove the two bolts and washers for the middle linking rail on both end frames. Discarding the washers.



Step 3

Using the removed bolts, connect the middle linking rail to both end frames.

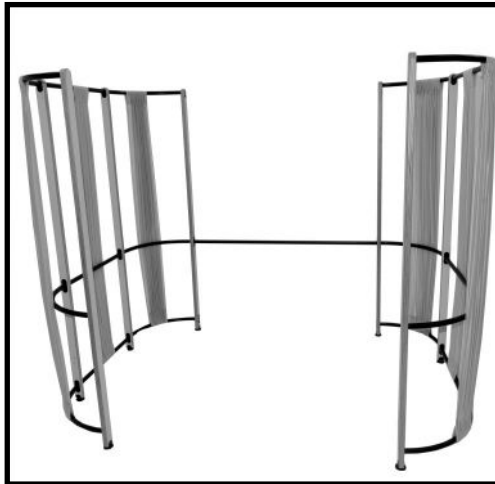

Step 4


Remove the bolts and washers for the top linking rail on the uprights, discard the washers. Secure the top rail to one end frame.



Step 5

Thread the top* of the curtain along the top rail, and secure the rail to the other end frame.

Check the rail is visible on the inside of the booth. See below.

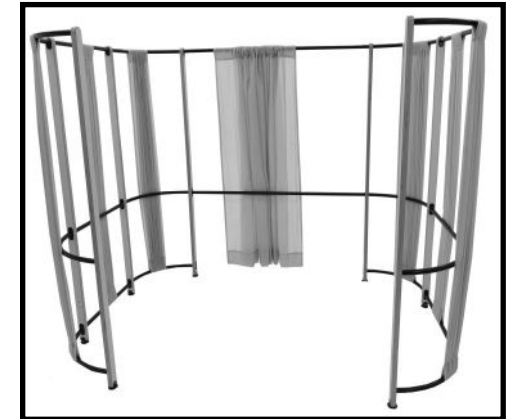

* the top Loop on the curtain is smaller than the bottom loop


verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG
t: +44 (0) 1494 448000 w: verco.co.uk

DOC ID: AI_0064

Step 6

Thread the bottom linking rail through the bottom of the curtain.

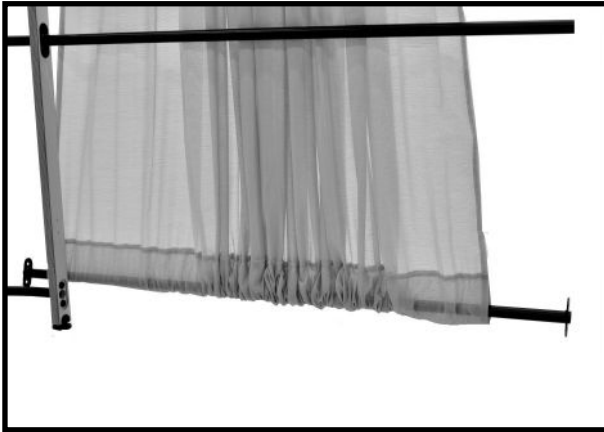


Step 7

Undo the bottom bolts and washers to one end frame. Fix the bottom linking rail in place, using the bolts, discard the washers.



Fix the other end of the bottom rail to the other end frame assembly in the same method.


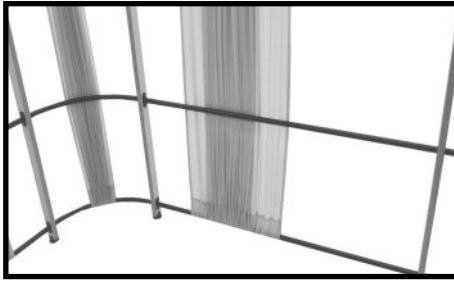


Step 8

Rotate the rear seat fixing brackets and position the seat so they align with the rear uprights. Then rotate the side seat brackets to align with the adjacent uprights



Using the supplied screws, attached the seat brackets to the uprights.

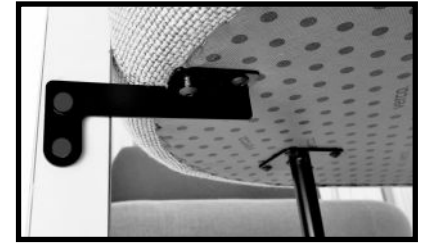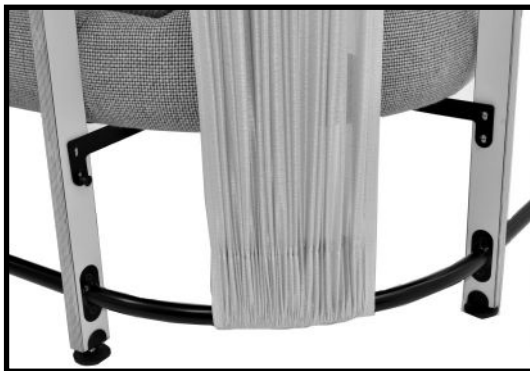

Secure seat brackets to the seat once fixed in location.

Step 9

Draw the curtains long the rails to enclose the booth.



Kurt Booth Assembly Instructions

verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG
t: +44 (0) 1494 448000 w: verco.co.uk

DOC ID: AI_0064