

brix-up Assembly Instructions

Unwrap and lay the back on the protective card or film




Lift the seat base and rotate onto the brackets.



Using a “podger”, locate an end bracket and fix one screw.



... then repeat at the other end.

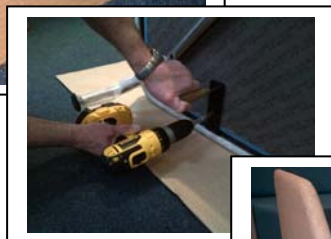

NOTE :
cleared fixing
location for acoustic
linking panel



Finally, hand locate all other fixings, tighten and lift the unit upright, taking care not to damage the leg frames.