


AER3018V: 3000 x 1800 VASE SHAPED TABLE


FRAME PARTS LIST

1. RAIL(1960mm): 2No.
2. RAIL SUPPORT BRACKET: 4No.
3. LEG FIXING PLATE: 2No.
4. 900 LEG: 1No.
5. 700 LEG: 1No.
6. RAIL FINIAL: 2No.
7. RAIL CLAMP: 4No.
8. RAIL MOUNTING POSITION

RAIL MOUNTING POSITION DETAIL

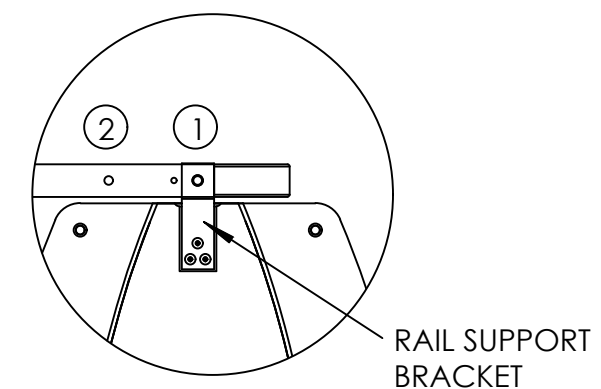

RAIL SUPPORT BRACKET LOCATED
AT MOUNTING POSITION 1 ON RAIL

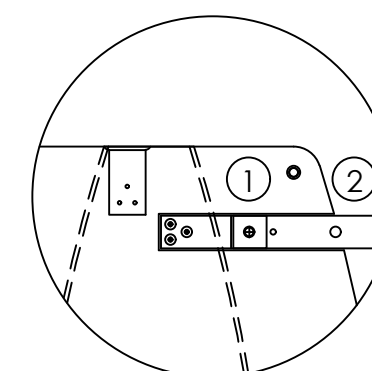

RAIL SUPPORT BRACKET LOCATED
AT MOUNTING POSITION 1 ON RAIL

verco.

Chapel Lane, High Wycombe, Buckinghamshire, HP12 4BG
t: +44 (0) 01494 448000 w: verco.co.uk

DRG NO **AI_0126**

Rev. **0**

SHEET No **1/2**

BY **AS**

DATE **08/09/2025**

ISSUE / DATE BY ALTERATION

TITLE **Aerofoil Table Assembly Instructions**

AER3018V






MODEL **AER3018V**

PT No

SCALE **1:14** WHEN PRINTED AT **A3**

AUTHORISED **PR**

DATE **01/10/2025**

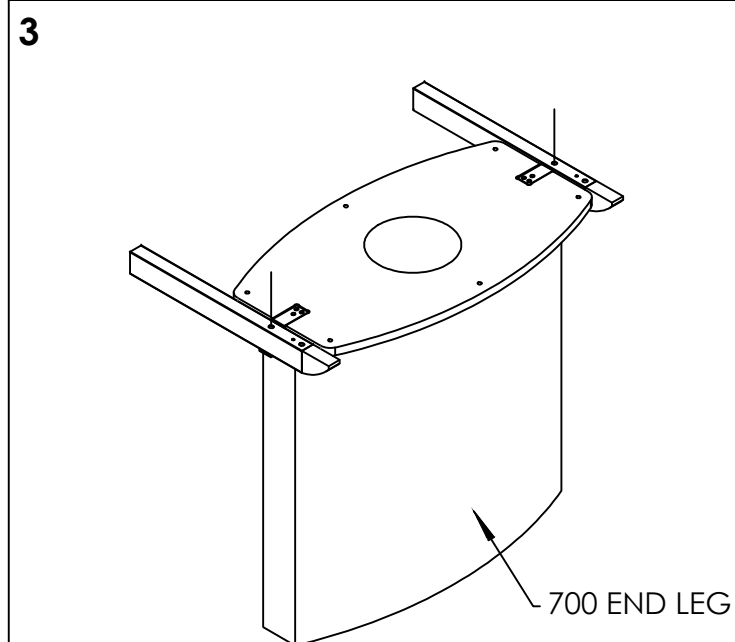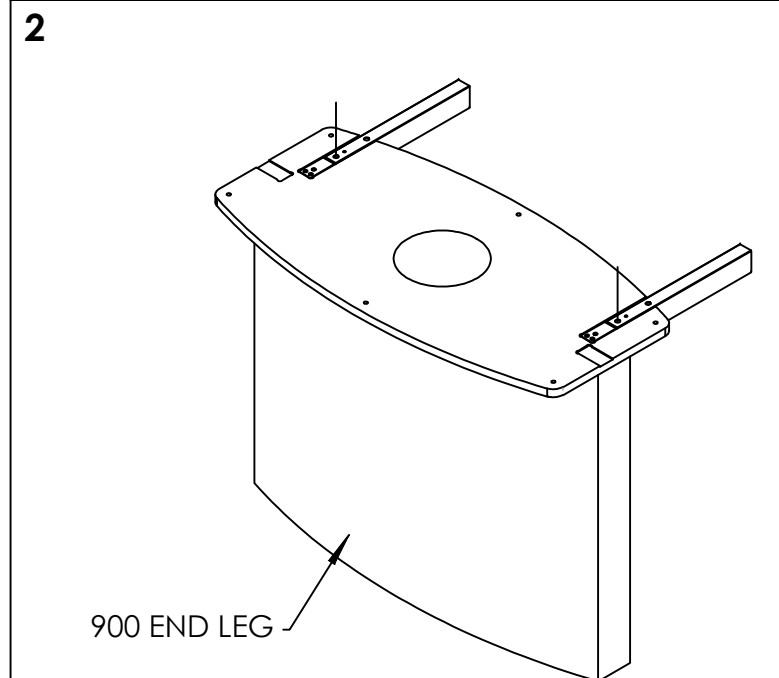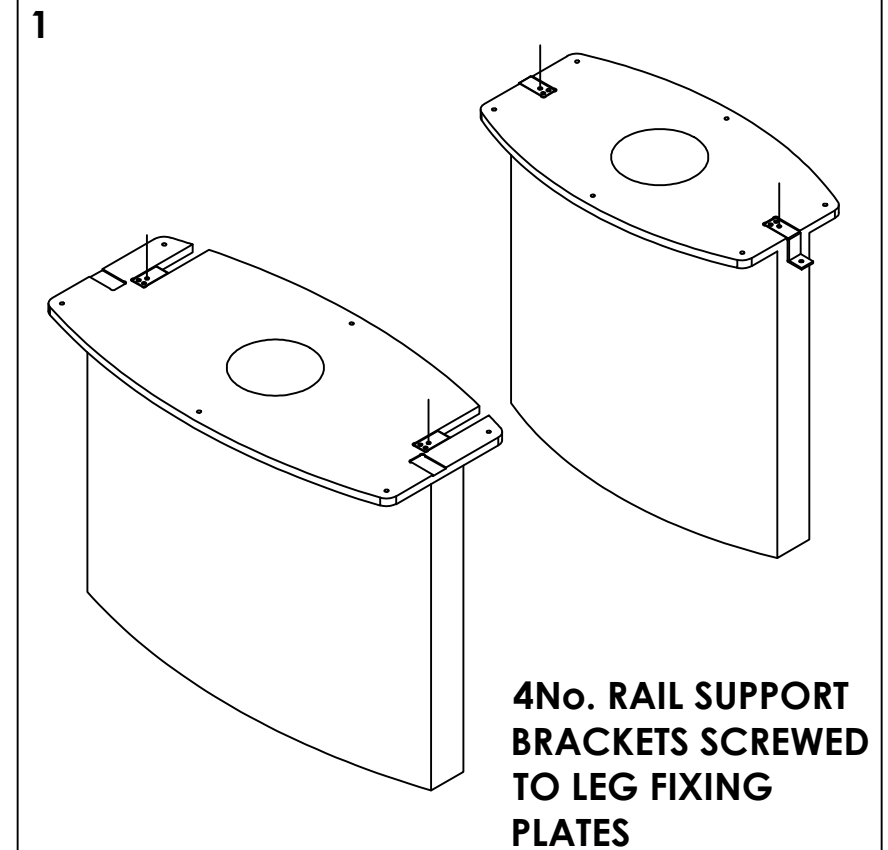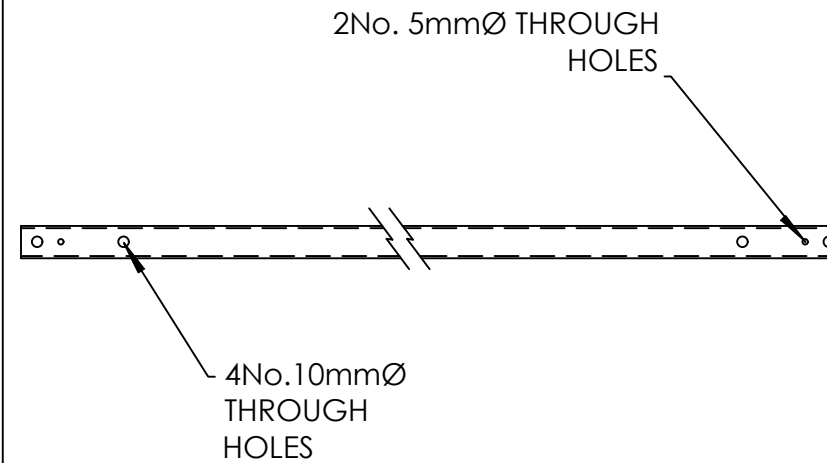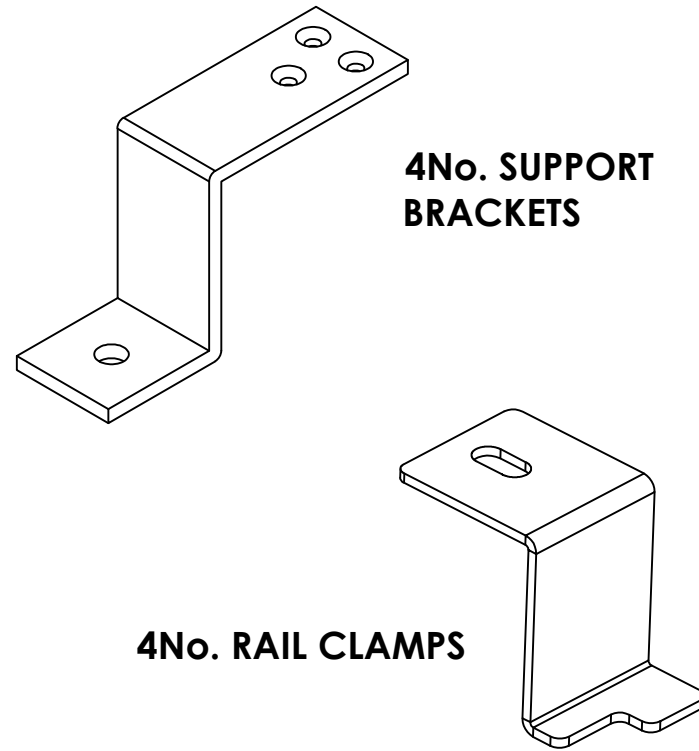

- 4**
1. FIX THE RAILS WITH M8 BOLTS PROVIDED, TO THE RAIL MOUNTING POSITION, SHOWN ON THE PLAN ON SHEET 1.
 2. FIT THE WOODEN RAIL FINIALS INTO THE RAILS. SECURE WITH SMALL WOOD SCREWS THROUGH SMALL HOLE IN RAIL.
 3. POSITION TOPS ONTO THE TABLE FRAME AND JOIN USING THE TABLE CONNECTORS.
 3. BOLT THROUGH LEG FIXING PLATES INTO TOPS USING M6 BOLTS.
 4. FIX THE 4No. RAIL CLAMPS TO THE TOP WITH THE WOOD SCREWS PROVIDED.

verco.

Chapel Lane, High Wycombe, Buckinghamshire, HP12 4BG
t: +44 (0) 01494 448000 w: verco.co.uk

DRG NO **AI_0126**

Rev. **0**

SHEET No **2/2**

BY **AS**

DATE **08/09/2025**

ISSUE / DATE BY ALTERATION

TITLE **Aerofoil Table Assembly Instructions**

AER3018V

MODEL **AER3018V**

PT No

SCALE **1:14** WHEN PRINTED AT **A3**

AUTHORISED **PR**

DATE **01/10/2025**