

Tablo Box Leg Table


Two Base Version

Assembly Instructions

TBO2413R, TBO3013R, TBO3613R
TBO2413B, TBO3013B, TBO3613B
TBO2418V, TBO3018V, TBO3619V

Step 1:

Screw the cam pins into the 4 inner holes in the face of each box leg.

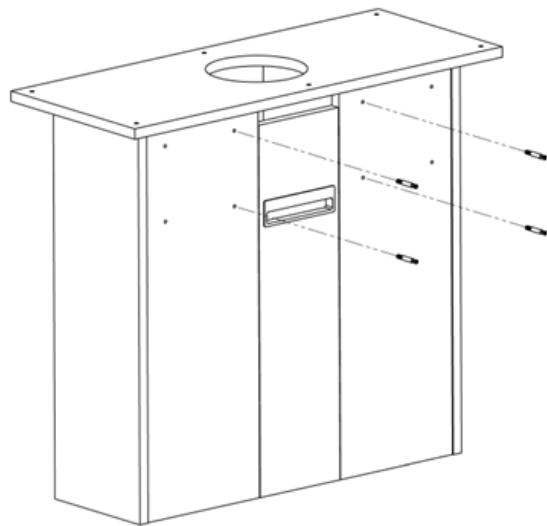


verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG
t: +44 (0) 1494 448000 w: verco.co.uk
DOC ID: AI_0115 - Rev0

Step 2:

Slide the bracing panels on to the cam pins, joining the two bases together. Tighten the cams on the inside of the modesty panels.

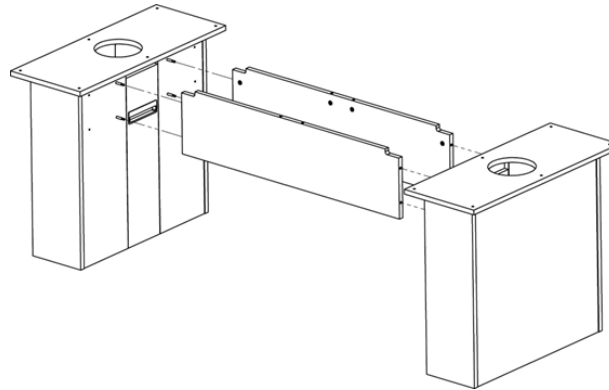


Step 3:

Level the bases using the feet under each box base.

Step 4:


Screw the cam pins into the underside of the table top/tops.

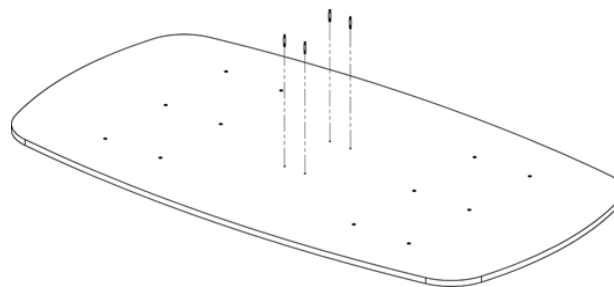

Step 5:

Lower the top/tops onto the table base, locating the cam pins into modesty panels.

If a multiple piece top fit and tighten the connecting bolts.

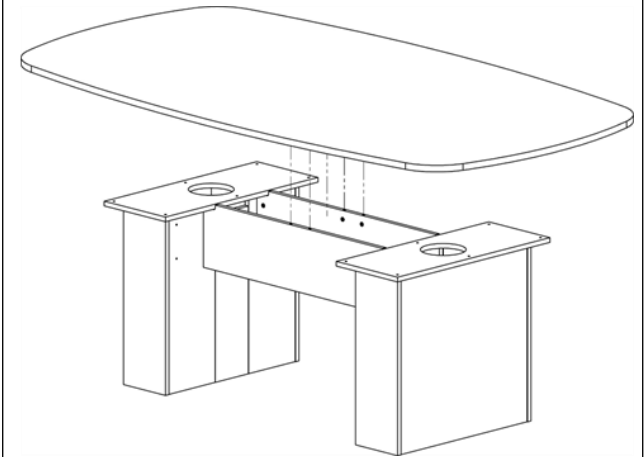

Step 6:

Tighten all the cams in the modesty panel.

Step 7:

Bolt through the legs top plates into the top using M6 bolts.

Fit joint levelling plates if supplied.

