


# Tablo Box Leg Table Three Base Version Assembly Instructions

TBO4413R, TBO4416R, TBO5016R  
TBO4413B, TBO4416B, TBO5016B  
TBO4420V, TBO5020V

## Step 1a: If all legs are 700 wide

Screw the cam pins into the 4 **inner** holes in the face of each box leg,

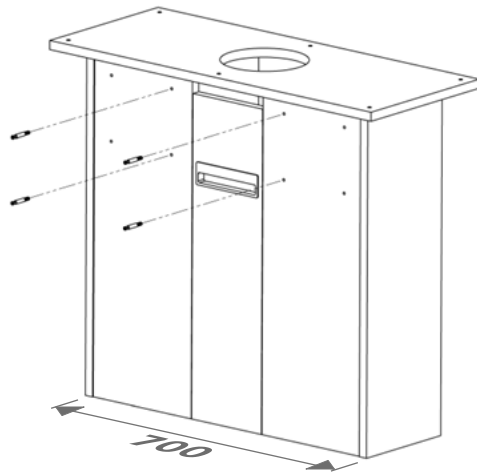


# verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG  
t: +44 (0) 1494 448000 w: verco.co.uk  
DOC ID: A\_0128 - Rev 0


## Step 1b: If legs are of mixed size

- 700 Leg: Screw the cam pins into the 4 **outer** holes in the face of the box leg.
- 900/1200 Leg: Screw the cam pins into the 4 holes in the face of the box leg.
- Repeat this for all additional legs

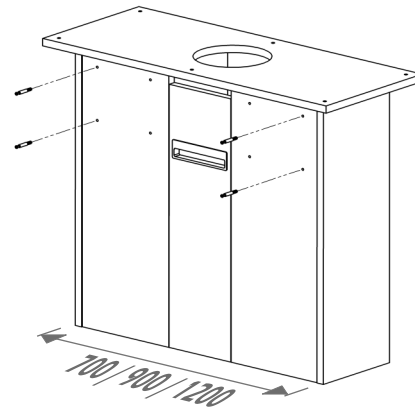


## Step 2:

Screw 4 cam pins into the pre-drilled holes in the opposite face of the intermediate leg.

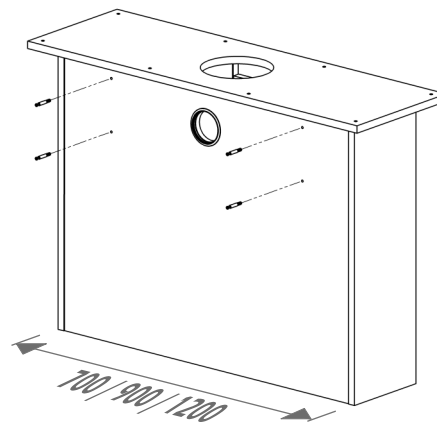

## Step 3:

Slide the bracing panels over the cam pins, joining the bases together. Tighten the cams on the inside of the modesty panels.

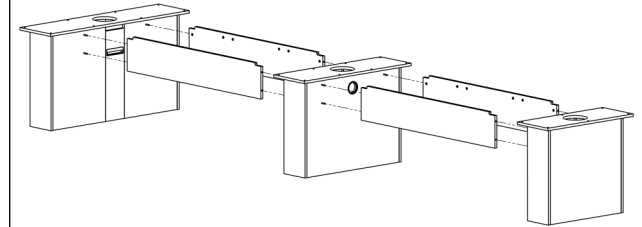


## Step 4:

Level the bases using the feet under each box base.


## Step 5:

Screw the cam pins into the 5mmØ holes in the underside of each of the table tops.

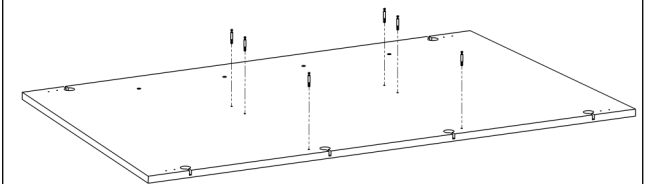


**Step 6:**

Starting at one end, lower each top in turn onto the table frame, locating the cam pins into modesty panels.

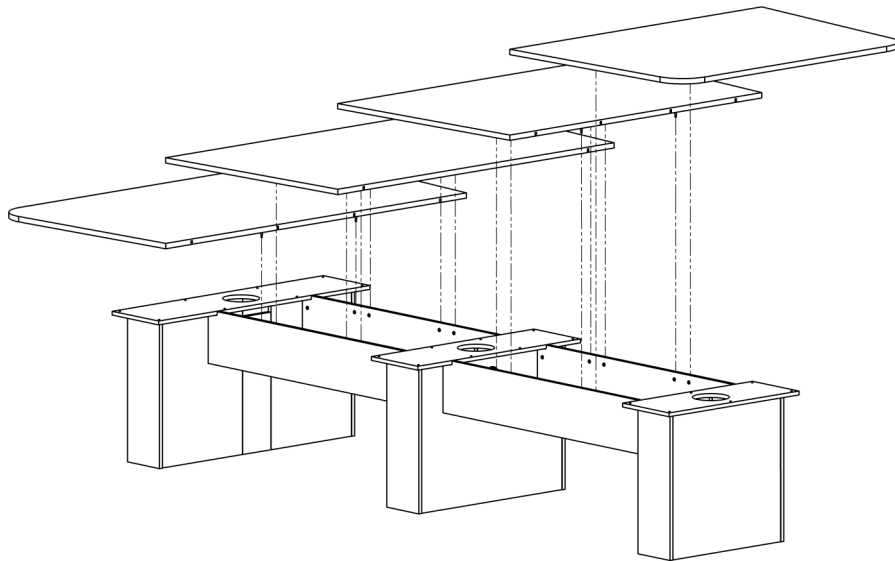**Step 7:**


Fit the connecting bolts and joint levelling plates to the underside of the tops.

Tighten all the cams in the modesty panel.

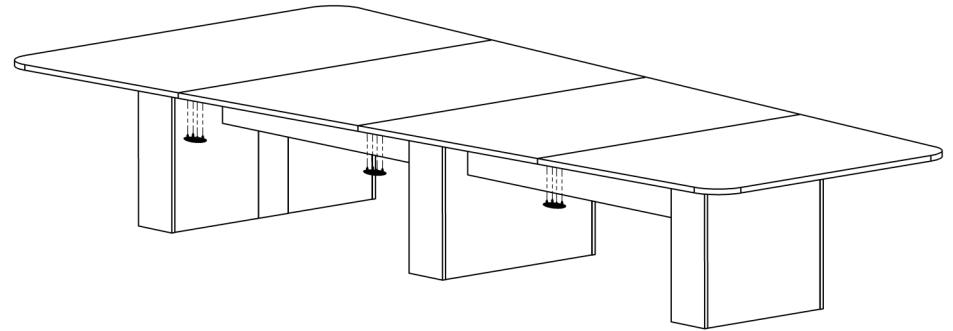**Step 8:**

Ensure tops & joints are level and edges aligned.

Bolt through the legs top plates into the top using M6 bolts.

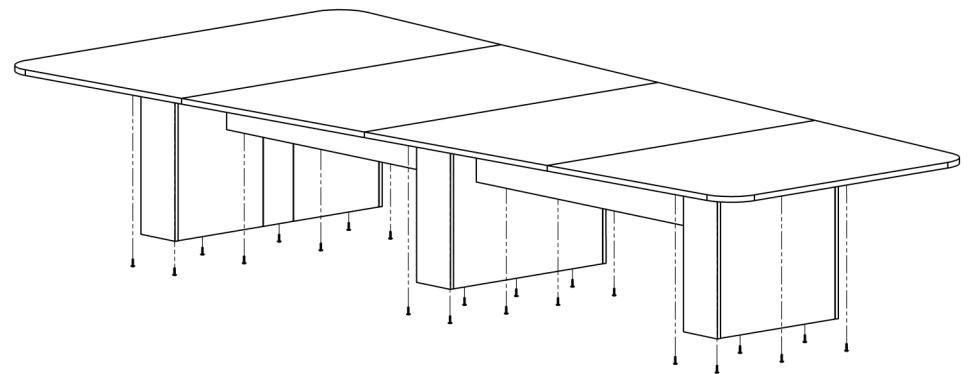

# verco.

Chapel Lane, High Wycombe, Buckinghamshire HP12 4BG

t: +44 (0) 1494 448000 w: verco.co.uk

DOC ID: A\_0128 - Rev 0